



SERIES 97

Half-Pitch

Actuation Instructions: Switch slides should be actuated from a low angle in the intended direction of travel. The application of excess force from a high angle can cause permanent damage to the contact system of the switch. Tape seals must be removed to properly actuate the switches as described above.

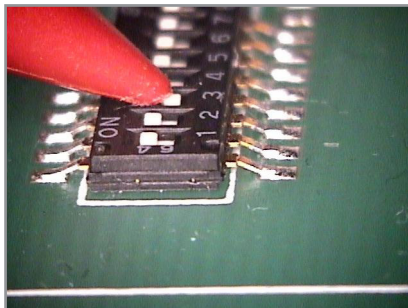

Right way to actuate the switch.

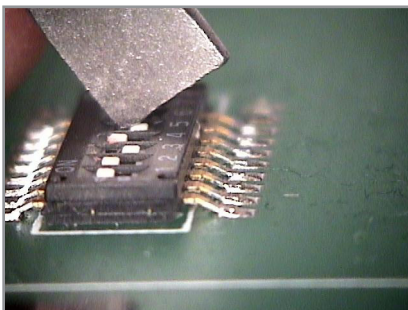

Wrong way to actuate the switch.